



INSTALLATION INSTRUCTIONS

AUS MOUNT™

IMPORTANT

- ▲ ENSURE YOUR FIREARM IS UNLOADED AND CLEARED PRIOR TO INSTALLING ANY ACCESSORIES.
- ▲ IF YOU HAVE ANY DOUBTS OR QUESTIONS ABOUT THESE INSTALLATION INSTRUCTIONS, WE RECOMMEND YOU HAVE THE WORK DONE BY A QUALIFIED GUNSMITH.

TOOLS REQUIRED

- T15 torx (star key) driver
- 5/32 hex driver or large flat blade driver
- Torque wrench (in-lbs increments)
- Optional rifle support
- Optional thread sealer loctite™ 222 purple (not needed)

INSTALLATION: CLAMPS

1. Place the AUS Mount on the 1913 rail with clamps loose, and apply a slight forward pressure toward muzzle
2. Tighten the front clamp screw until it is snug, then tighten the rear clamp screw until it is also snug.
3. In the same order tighten the clamp screws to a (dry) torque of 45 in-lbs.

INSTALLATION: RING CAPS

1. Remove both front and rear ring caps.
2. Place optic into the AUS Mount and place ring caps in place and start each of the T15 screws so they are threaded into the base approximately 4 complete rotations.
3. Set and confirm the position to the correct eye relief and level.
4. Ensuring not to disturb the position and level of the optic, continue to tighten the ring cap screws in an X pattern until slight resistance is felt on each screw. Ensure that the gap between the base and each ring cap is equal, left to right.
5. Tighten each screw to the final recommended torque of 15 in-lbs. (Dry)